

# TRX21-734

## **Install Guide**

Revision: C



© Kleinn Automotive Accessories, All rights reserved.

Phone: (520) 579-1531 Web: <u>www.Kleinn.com</u>



## TRX21-734

## **Table of Contents**

1.	App	lication Chart	4
	1.1.	List of compatible vehicles	4
	1.2.	Incompatible Vehicle Features & Trim Packages	4
	1.3.	Aftermarket Product Compatibility	4
2.	Befo	ore You Start	5
3.	Insta	allation Overview	5
	3.1.	Kit Layout & Location	5
4.	List	of Tools & Supplies	6
	4.1.	Required Tools	6
	4.2.	Specialty Tools	6
	4.3.	Consumables	6
5.	Part	s List	7
	5.1.	Primary Kit Components	7
	5.2.	Fittings & Related Items	7
	5.3.	Electrical Components & Related Items	8
	5.4.	Mounting Brackets	8
	5.5.	Hardware & Related Items	9
6.	Reco	ommended Routing of Air Tubing & Wire	.13
7.	Ben	ch Assembly	. 14
	7.1.	Compressor Preparation	.14
	7.2.	Tank Preparation	.16
	7.3.	Accessory Preparation	. 16
	7.4.	Air Horn Preparation	. 17
	7.5.	Ore Bracket Preparation	. 19
	7.6.	Small Horn Bracket Preparation	. 20
	7.7.	1302 Preparation	. 20
8.	On-	Vehicle Assembly	.21
	8.1.	Compressor Installation	.21
	8.2.	Tank Installation	. 24
	8.3.	Air Horn Installation - Large Horn	. 29
	2 /	Air Horn Installation - Small Horn	32



## TRX21-734

8	3.5.	Air Horn Installation - Medium Horn	33
8	3.6.	System Plumbing	34
9.	On	-Vehicle Electrical Installation	35
9	0.1.	Solenoid Connector - Reconfigure & Wiring	35
9	9.2.	Attach Relay & Fuse to Vehicle	37
9	9.3.	Install Horn Button	37
9	9.4.	Route Wiring & Make Connections	37
10.	-	Testing the Air System	38
1	0.1.	Air Compressor Test	38
1	0.2.	Air Horn Test	38
1	.0.3.	Quick Connect Coupler Test	38
11.	ı	Maintenance	39
12	,	Warranty Information	40



TRX21-734

### 1. Application Chart

This kit is a direct bolt-on aftermarket product. The vehicles listed in the below table are considered to be compatible with this aftermarket kit. Every effort has been made to verify fitment on these vehicles in their factory condition.

NOTE: Before unpacking your kit, review this manual in full & verify the correct space & mounting locations exist with your trim package.

#### 1.1. List of compatible vehicles

Year	Make	Model	Drivetrain	Engine	Cab	Bed	Trim
2021 -	RAM	TRX	4x4	6.2L	Crew	5′7″	All
2024				Supercharged			
				V8			

NOTE: Drilling holes may be required for installing ground wires and switches based on installers preference.

#### 1.2. Incompatible Vehicle Features & Trim Packages

This kit may not be compatible with the following vehicle features / trim packages:

MOPAR Power Steps

#### 1.3. Aftermarket Product Compatibility

This kit has been designed to be compatible with the following products from leading manufacturers:

• Amp Research PowerStep Series

This kit has not been designed to be compatible with the following products:

N/A

Page | 4 Revision: C

TRX21-734

#### 2. Before You Start

Read this manual in its entirety before starting installation. Verify you have all the parts listed & that you clearly understand the installation procedure. Contact KLEINN Technical Support with any questions you may have.

Installation of this kit requires moderate mechanical aptitude.

Use the proper tools, supplementary lighting, and safety equipment when installing this kit.

#### 3. Installation Overview

#### 3.1. Kit Layout & Location

Item No.	Description	Mounting Location	Approx. Install Time
1	6450RC Air Compressor	Engine Compartment, Passenger Side	1 Hour
2	6355RT Air Tank	Above Skid Plate, Next to Shock Reservoir	2 Hour
3	730 Air Horns	Along Frame Rails, Driver & Passenger Side	3 Hours
4	*1302 Relocation Kit	To be determined by Installer/Customer	N/A

<sup>\*</sup>Item Not Illustrated

Note: Wiring time is not factored into the overall install of this kit.

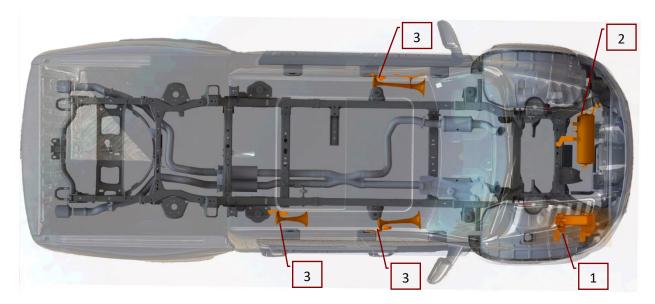


Figure 1- Kit Layout

Page | 5 Revision: C



### TRX21-734

### 4. List of Tools & Supplies

#### 4.1. Required Tools

- Mechanic's 1/4" & 3/8" Drive & Socket Set Imperial & Metric
- Combination wrenches Imperial & Metric
- Hex wrenches Imperial & Metric
- Screwdriver Set #1, #2
- Wire Cutters
- Wire Strippers
- Wire Crimpers
- Utility Knife or Equivalent
- Magnetic Retrieval Tool (Flexible)

#### 4.2. Specialty Tools

- 1/4" & 3/8" Universal Joints
- 1/4" & 3/8" Extensions
- Multimeter, Test Light, or Equivalent
- Heat Gun
- Trim Panel Removal Tools
- Drill Driver & Bits
- Impact Driver & Bits

#### 4.3. Consumables

- Quality Electrical Tape
- Medium Strength Thread Locker
- Sandpaper, Wire Brushes or Equivalent
- Extra Zip Ties
- Touch-up Paint

Page | 6 Revision: C

TRX21-734

#### 5. Parts List

Unpackage & organize the kit contents and verify all parts listed below are included. Contact KLEINN Support if any questions arise.

#### 5.1. Primary Kit Components

NOTE: Items in this section may come in their own packages which may include additional items, hardware, or documentation.

Item No.	Qty	Part No.	Description	Picture
1.	1	6450RC	150 PSI Waterproof Air Compressor Kit	
2.	1	6355RT	3.3 Gal. Air Tank, 6-Port	
3.	1	730	730 Series Air Horn Kit	2500
4.	1	1302	Quick Disconnect Air Relocation Kit NOTE: May be located within INF-1 Bag	0,000
5.	1	INF-1	Tire Inflator Kit	<b>O</b>
6.	1	59830	Digital Tire Inflator w/ Pressure Release	

#### 5.2. Fittings & Related Items

Item No.	Qty	Part No.	Description	Picture	
F1.	1	51414F	1/2" NPT Female to 1/4" Compression		
F2.	4	51414L	1/2" NPT Male to 1/4" Compression, Elbow		
F3.	1	51212L	½" NPT Male to ½" Compression, Elbow		
F4.	1	52175	175 PSI Pop-Off Safety Valve		

Page | 7 Revision: C



## TRX21-734

F5.	1	2151	Pressure Switch, 110 PSI On – 145 PSI Off	
F6.	1	52835	¼" NPT Male Drain Plug	M
F7.	2x 12'	25014-1	½" O.D. Air Tubing	0
F8.	2	JUICE	KLEINN Liquid Thread Sealant	

<sup>\*</sup>NOTE if required

### 5.3. Electrical Components & Related Items

Item No.	Qty	Part No.	Description	Picture
-	1	320	Momentary Switch, NO	
-	1	6858	Wire kit w/ FT4-10 Fuse Tap	SOCIETY STITLES
-	10'	SLT14	¼" Loom Pack	
-	10'	SLT38	3/8" Loom Pack	
-	10'	SLT12	½" Loom Pack	

## 5.4. Mounting Brackets

Item No.	Qty	Part No.	Description	Picture	
-	1	-	Upper Compressor Bracket		
-	1	-	Lower Compressor Bracket		
-	1	-	Anchor Bracket	*	

Page | 8 Revision: C



## TRX21-734

-	1	-	Primary Tank Bracket	
-	1	-	Tank Support Bracket	
-	1	1	Cutaway Washer	6
-	1	-	Passenger Horn Bracket, Sm	(7)
-	1	-	Passenger Horn Bracket, Med	*
-	1	-	Driver Horn Bracket, Lg	
-	1	-	Ore Mount Bracket, Left Side	
-	1	-	Ore Mount Bracket, Right Side	

#### 5.5. Hardware & Related Items

Print out the hardware sheets at the end of this section at 100% Scale to facilitate hardware identification.

Item No.	Qty	Hardware Size	Description	Picture
H1.	1	7/16"-14, 1" Long	Square Neck Carriage Bolt	
H2.	4	7/16" 14	Hex Nut	6
Н3.	1	7/16"-14	Nylon Lock Nut	
H4.	4	7/16"	SAE Washer	0
H5.	4	7/16"	Split-Lock Washer	O
Н6.	2	5/16"-18, 3/4" Long	Square Neck Carriage Bolt	•

Page | 9 Revision: C



## TRX21-734

H7.				
	1	5/16"-18, 1/2" Long	Hex Bolt	
H8.	2	5/16"-18	Hex Nut	
Н9.	2		SAE Washer	0
H10.	1	5/16"	USS Washer	
H11.	2		Split-Lock Washer	0
H12.	1	1/2"-13, 1" Long	Hex Bolt	
H13.	1	1/2"-13	Hex Nut	6
H14.	1	1/2"	Fender Washer	0
H15.	1		Split-Lock Washer	O
H16.	1	M8 x 1.25, 50mm Long	Hex Bolt	
H17.	1	M8 x 1.25, 35mm Long	Hex Bolt	
H18.	2	M8 x 1.25, 25mm Long	Hex Bolt	
H19.	6	M8 x 1.25	Hex Nut	
H20.	6	- M8	Flat Washer	0
H21.	6	IVIO	Split-Lock Washer	O
H22.	2	13/16" OD, 5/16" ID	Rubber Grommet	
H23.	2	3/4" OD, 7/16" ID	Rubber Grommet	
H24.	4	M8 x 1.25	Flange Nut	

<sup>\*</sup>Not Illustrated on the Scale Sheets

2

В

Item #	Qty	Scale Image
H20	6	
H21	6	
H22	2	
H23	2	
H24	4	

В

A

В

TRX21-734 Sheet Scale 1:1

[mm] inches





## 6. Recommended Routing of Air Tubing & Wire

The below figures are a recommendation of the routing paths for both the air tubing & the wiring. Verify routing paths, wire lengths, & fuse/relay component locations before cutting the included wire. Reference Section 9 (On-Vehicle Electrical Installation) for a detailed electrical connection guide.

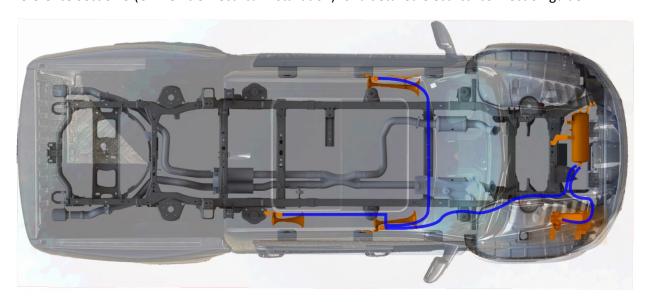


Figure 2- Suggested Air Tubing Routing

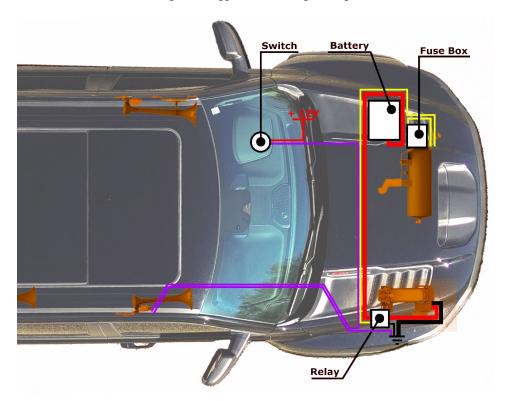


Figure 3- Suggested Electrical Routing

Page | 13 Revision: C

### 7. Bench Assembly

#### 7.1. Compressor Preparation

1) Install rubber grommets H22 & H23 on the Upper Compressor Bracket & Lower Compressor Bracket. Note the internal hole diameter of the grommets and their placement.

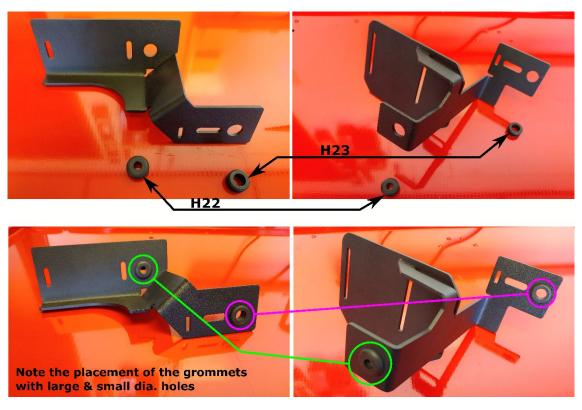


Figure 4- Grommet Installation

- 2) Install the compressor onto the smaller of the above illustrated brackets.
  - a. Use the hardware included in the compressor box & install it in an upside-down configuration as shown in the below figure.
  - b. Fully secure the compressor onto the small bracket. Do NOT overtighten the hardware.

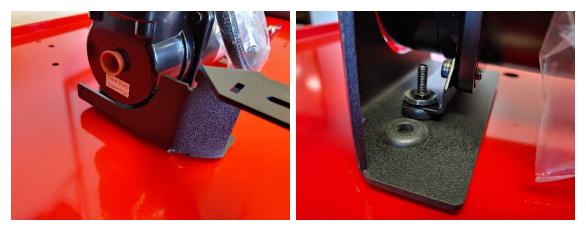


Figure 5- Compressor-To-Bracket Installation 1

Page | 14 Revision: C

TRX21-734

- 3) Loosely install the compressor onto the larger of the two brackets as shown below.
  - a. Install the hardware in an upside-down configuration as before.
  - b. Keep the hardware loose so the bracket can slide back and forth without difficulty.





Figure 6- Compressor-To-Bracket Installation 2

- 4) Install the compressor air filter onto the inlet port or use the fitting pack and instructions (included in the box) to set up the remote air intake (snorkel).
- 5) Use fitting F1 & 2-3 drops of JUICE liquid thread sealant (F8) and install the fitting onto the compressor leader hose.





Figure 7- Air Filter & Compressor Fitting Installation

Page | 15 Revision: C

#### 7.2. Tank Preparation

1) Using the JUICE liquid thread sealant (F8), install all fittings onto the air tank, the INF-1 Kit & the tire inflator as shown in the below figures.

NOTE: One fitting used on the tank is from the fitting pack located in the 1302 Quick Disconnect Air Relocation Kit, which may be located in the INF-1 bag.

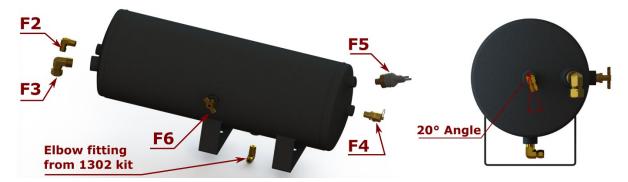


Figure 8- Tank Fitting Installation

2) After all tank fittings have been installed, use the ¼" air tubing located within the INF-1 bag and install the tubing onto the ¼" elbow fitting from the 1302 kit.

#### 7.3. Accessory Preparation

Use JUICE (F8), and combining all the fittings from the INF-1 Kit & the Digital Tire Inflator, install the fittings onto the hose & the tire inflator so that the INF-1 kit & tire inflator can be used as standard air tools.

See the below figure for reference.



Figure 9- Accessory Fittings Installation

Page | 16 Revision: C

#### 7.4. Air Horn Preparation

- 1) Detach all air horns from the mounting bar & discard it & the white plastic base protectors.
- 2) Separate the three horns from each other by detaching the air tubing from each horn.
- 3) Separate the medium & long trumpets from their respective base by <u>applying heat from a heat</u> gun or propane torch, then unscrewing the trumpets in a counter-clockwise direction.







Figure 10- Air Horn Separation

- 4) Install the solenoid block onto the base with the fittings & disconnect the wire plug.
  - a. Ensure the solenoid is positioned parallel & does not interfere with the trumpet fitment.
  - b. Ensure the directional arrow stamped on the solenoid is pointing towards the base.
  - c. The wire plug is removed via a Phillips head screw from the back of the connector, unscrew & pull the plug away from the solenoid.

#### 7.4.1. Compression Fitting Swap #1

- 1) Swap the straight  $\frac{1}{2}$ " compression fitting with the F2 fitting (use JUICE) in the correct orientation & location. See the below figure.
- 2) Install the large compression fitting onto the solenoid using JUICE.







Figure 11- Solenoid Installation & Fitting Replacement

Page | 17 Revision: C

### 7.4.2. Compression Fitting Swap #2

3) Replace the push to connect fitting form the long horn base & the small horn base with remaining F2 fittings (use JUICE) in the correct orientation. See the below figure.



Figure 12- Horn (Small, Large) Fitting Orientation

Page | 18 Revision: C



#### 7.5. Ore Bracket Preparation

- 1) Using all of hardware H6, H8, H9 & H11, loosely combine both Ore Mount Brackets as shown below.
  - a. H6 carriage bolts are inserted from the underside through the left brackets square holes.



Figure 13- Ore Bracket Assembly

- 2) Use one ore from the horn box and install it onto the circular platform of the bracket using it's included hardware.
  - a. Install the flat rubber strip onto the inside of the crescent ring to protect the trumpet.
  - b. DO NOT USE the large rubber spacer when installing the ore.
  - c. Install the hardware in an upside-down configuration as shown below.
  - d. Keep the hardware loose so the Ore can be positioned after the trumpet is installed.



Figure 14- Ore Installation

Page | 19 Revision: C

### 7.6. Small Horn Bracket Preparation

Loosely install Qty: 2 of hardware H18, H19, H20 & H21 as shown in the below figure.

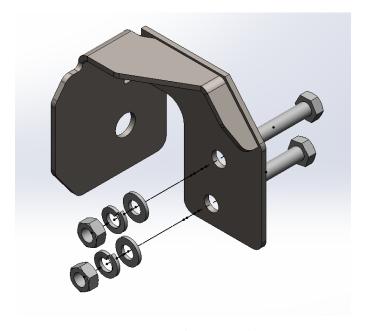


Figure 15- Passenger Horn Bracket, SM, Hardware Preparation

#### 7.7. 1302 Preparation

Using JUICE (F8), assemble the 1302 kit as shown below.

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	1302-401	1302 RELOCATION BRACKET	1
2	51414BLK	1/4 NPTF BULKHEAD FITTING	1
3	51414	1/4" NPT X 1/4" COMP. TUBE FITTING	1
4	51414L	1/4" NPT X 1/4" COMP. TUBE FITTING, 90° ELBOW	1
5	59813	1/4 NPT QUICK DISCONNECT, M	
6	DUSTCAP	DUST COVER FOR QUICK DISCONNECT	1

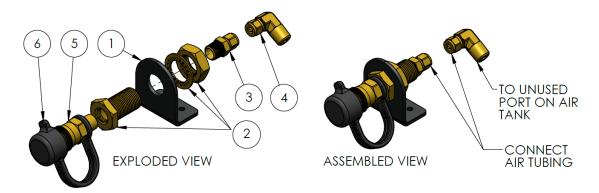


Figure 16- 1302 Kit Assembly

Page | 20 Revision: C

### 8. On-Vehicle Assembly

#### 8.1. Compressor Installation

The air compressor is installed in the engine compartment, on the passenger side, above the wheel well. There is a plastic platform that has 4 vertical posts protruding from the tray that are used to locate & secure the compressor.

1) Identify the mounting location for the compressor & the four (4) vertical posts that will be used to seat the compressor brackets.



Figure 17- Compressor Mounting Location

- 2) Align the rubber grommets onto the vertical posts with the compressor head directed towards the cabin.
- 3) Fully seat the brackets by pushing them down over the posts and forcing the rubber grommets to slide below the retention tabs on the two (2) upper posts.



Figure 18- Compressor Bracket, Installed

Page | 21 Revision: C



TRX21-734

- 4) Adjust the position of the below illustrated bracket so that the compressor feet are seated properly with the bracket.
- 5) Fully tighten the hardware so the compressor is fastened securely to the bracket. Do not overtighten the feet hardware so much that the rubber pads become damaged.

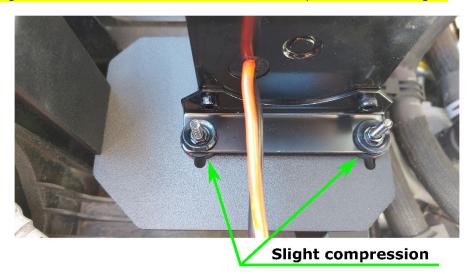


Figure 19- Compressor Rubber Feet

6) Loosen (do not remove) the nut securing the crossmember support tube as shown below.

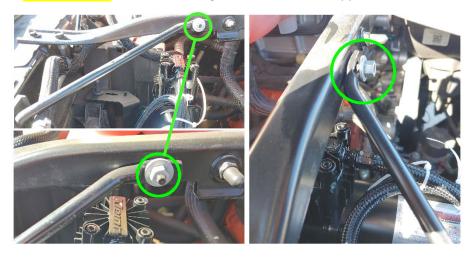


Figure 20- Crossmember Support Tube Location

Page | 22 Revision: C

TRX21-734

7) Place the Anchor Bracket into the gap between the compressor head & the leader hose.

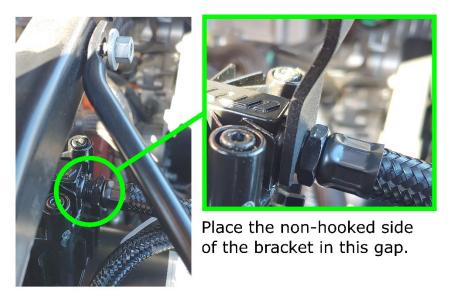


Figure 21- Anchor Bracket Placement

- 8) Pivot the bracket so it hooks behind the loosened nut on the crossmember support tube.
- 9) Fully tighten the nut back to OEM torque specifications.



Figure 22- Anchor Bracket, Installed

Page | 23 Revision: C

#### 8.2. Tank Installation

The air tank is located above the skid plate, where it mounts onto the same crossmember used to secure the shock reservoirs. The tank mounting system consists of 2 brackets and a custom washer which bolts onto structural members and positions the tank beside the shock reservoirs.

- 1) Remove the OEM skid plate from the underside of the vehicle to get access to the mounting locations for the tank brackets.
- 2) Using hardware H1, place the Tank Support Bracket on top & in front of the primary crossmember shown in the below figures.
  - a. Insert the carriage bolt (H1) from behind the hard plumbing lines on top of the crossmember.
  - b. The bracket should be placed over the highlighted hole (Ref. Figure 22 Right)on top of the crossmember and sit next to the mounted shock reservoirs (Ref. Figure 23).



Figure 23- Primary Crossmember (Left) & Top View of Crossmember (Right)

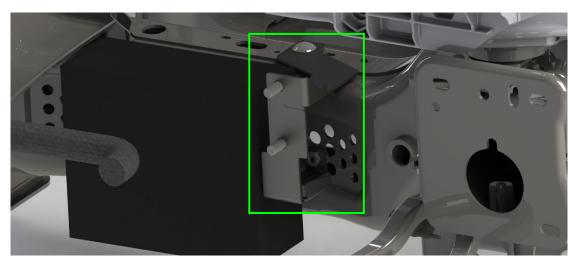


Figure 24- Tank Support Bracket Installed with Carriage Bolt

Page | 24 Revision: C



TRX21-734

3) From behind & inside the crossmember, use a magnetic pickup tool to place the Cutaway Washer over the carriage bolt and hold it in place.

NOTE: Ensure the notched portion of the washer is oriented properly to clear the wire bundle retaining clip. See the below figure.

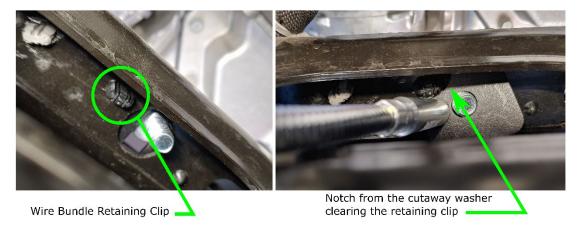


Figure 25- Cutaway Washer Placement & Orientation

4) Loosely thread the Nylon Lock Nut (H3) onto the carriage bolt as shown below.



Page | 25 Revision: C



Figure 26- Cutaway Washer Secured via Nylon Lock Nut

5) Using hardware H7 & one (1) H10 washer, Align the welded nut (lower part of bracket) with the crossmember hole circled in the below figure & loosely thread the hex bolt (H7) & washer (H10) from the inside of the crossmember.





Figure 27- Hardware Installation of Lower Tank Support Bracket

6) This bracket will mate up with the following bracket before being fully secured in place.

Follow the next steps to finish installation of the tank mounting brackets.

- 7) Identify the OEM bolts that secure the driver side skid plate mounting bracket as shown in the below figure. It is located behind & above the driver side tow hook.
- 8) Remove the two bolts. They will not be re-used.

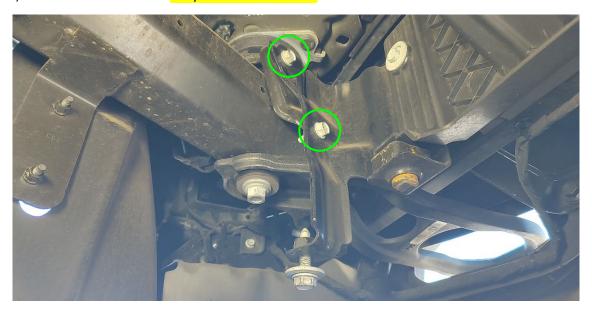


Figure 28- OEM Bolt Removal, Location

Page | 26 Revision: C

### TRX21-734



Figure 29- OEM Bolts, Removed

- 9) Place the clearance holes of the Primary Tank Bracket over the threaded studs of the Tank Support Bracket
- 10) Temporarily secure the brackets together by using one of the H2 nuts onto the stud.
- 11) Using hardware H16 & H17, align the other side of the primary bracket with the holes from the removed bolts and fully secure the primary bracket onto the vehicle frame.

NOTE: H16 (longer bolt) will be used in the upper bracket hole & H17 (shorter bolt) will be used in the lower hole position (REF. the below figures).



Figure 30- Primary Tank Bracket Installation 1, Steps 9 & 10

Page | 27 Revision: C

### TRX21-734



Figure 31- Primary Tank Bracket Installation 2, Step 11

12) Fully tighten the bolts on the Tank Support Bracket at this time.

NOTE: Tighten the nylon lock nut last when performing the above step.

The tank can now be installed onto the brackets by following the below steps.

- 13) Remove the nut securing both tank brackets together.
- 14) Place the tank onto the 4 studs and fasten using QTY: 4 of each hardware H4, H5 & H2 in that stacking order. See the below figure.
- 15) Fully tighten all hardware.

NOTE: The air tank has feet that are offset from the center. The longer protrusion of the tank should be directed towards the passenger side, which allows the drain to be pointed towards the ground.



Figure 32- Tank, Installed

Page | 28 Revision: C

#### 8.3. Air Horn Installation – Large Horn

The large air horn is located on the driver side of the vehicle. In between the front & rear doors. It mounts to existing studs on the body, across from the frame rail. It is mounted to the vehicle using the ore brackets (assembled in Bench Steps) & a horn mounting bracket.

- 1) Identify the mounting location of the Ore Brackets previously assembled in Section 7.5 (Ref. the below figures.
- 2) The mounting points are along the body & are covered by 2 plastic slot covers as shown below.

NOTE: The slots used for the ore brackets are directly forward of body mounted studs in-between the front & rear door area.





Figure 33- Mounting Location of Ore Brackets

- 3) Remove the plastic slot covers to expose the slot holes.
- 4) Place the ore bracket onto the body and expand the brackets so the tabs seat into the slot openings and hold the brackets in position.

NOTE: Ensure the ore is oriented towards the floor when installing this bracket (REF. the below figure).





Figure 34- Ore Brackets, Installed

5) Spread out the brackets as much as possible and fully tighten only the bracket hardware to lock the brackets into position.

Page | 29 Revision: C

TRX21-734

Directly behind the mounted ore brackets, are 3 studs protruding from the body in a triangle configuration. This is the mounting spot for the Driver Horn Bracket. See the below figure.



Figure 35- Horn Bracket Mounting Location

- 6) Remove the above highlighted OEM nuts (if present) from the studs and set aside to be reused.
- 7) Place the Driver Horn Bracket onto the studs and reinstall the OEM Nuts or use hardware H24. See the below figure.
- 8) Tighten the hardware to OEM torque spec.



Figure 36- Driver Horn Bracket, Installed

Page | 30 Revision: C



## TRX21-734

- 9) Using the large horn base (the base without the solenoid & manifold), install the largest trumpet onto the base by sliding the trumpet shaft through the Ore and threading it directly into the base
- 10) Place the base onto the horn bracket and fully tighten the base onto the bracket using QTY:2 of each H20, H21, & H19 (in that stacking order).
- 11) Reposition the Ore as needed to achieve good horn/trumpet alignment & fully tighten the ore hardware.

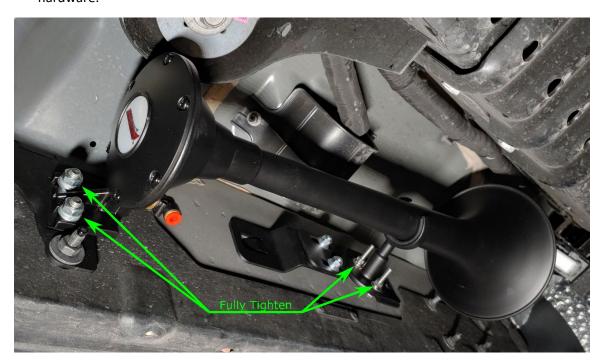


Figure 37- Driver Side Horn, Installed

Page | 31 Revision: C



#### 8.4. Air Horn Installation – Small Horn

The small air horn is mounted on the passenger side body strut cage, which is located on the outside frame rail, directly in line with the back of the passenger rear door.

1) Locate the frame structure that is used to mount the Passenger Horn Bracket, SM (Ref. Section 5.4). The below figure shows the location and mounting spot on the vehicle frame rail.



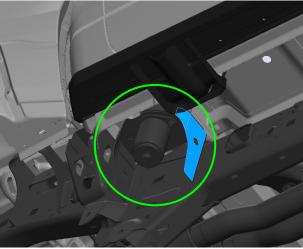


Figure 38- Small Horn Bracket, Location & Mounting Spot

- 2) Place hardware H12 & H14 on the inside of the body mount (left image of the below figure)
- 3) Install the horn bracket and secure it in place with H15 & H13 (right image of the below figure). Fully tighten the 1/2" hardware only.

NOTE: Align the edge of the bracket in-line with the edge of the frame to allow for the bracket to be oriented properly. Reference the below figure.





Figure 39- Small Horn Bracket, Installed

Page | 32 Revision: C

TRX21-734

- 4) Install the small horn onto the bracket using the loose hardware previously installed on the bracket.
- 5) Position the horn so that it does not hit the metal connector shield and fully tighten the hardware.



Figure 40- Small Air Horn, Installed

#### 8.5. Air Horn Installation – Medium Horn

The medium horn is located on the passenger side of the vehicle. In between the front & rear doors. It mounts to existing studs on the body, across from the frame rail. It is mounted to the vehicle using the remaining horn mounting bracket.

It mounts in the same manner as the horn mounting on the driver side.



Figure 41- Medium Horn Bracket, Location & Mounting Spot

Page | 33 Revision: C



- 1) Remove the OEM flanged nuts highlighted in the above figure.
- 2) Place the Passenger Horn Bracket, Med on the studs.
- 3) Reinstall the OEM flange (or H24) nuts and fully tighten to OEM torque spec.





Figure 42- Medium Length Horn Bracket, Installed

- 4) Use Qty: 2 of each hardware H20, H21 & H19 (in that stacking order) and install the medium horn base (base with the solenoid & fittings) onto the bracket.
- 5) Fully tighten the hardware.

NOTE: The medium length trumpet should not be installed until the electrical connector is attached and the plumbing from this base is fully routed.

#### 8.6. System Plumbing

Using all the included air tubing, route and plumb the tubing between the following:

- 1) The compressor to the air tank.
- 2) The air tank to the medium horn solenoid (1/2" tubing).
- 3) The horn solenoid to the small and large air horns.
- 4) The air tank to the 1302 Relocation Kit.



Figure 43- Final Plumbing of Air System

Page | 34 Revision: C

TRX21-734



#### 9. On-Vehicle Electrical Installation

It is recommended to disconnect the vehicle battery prior to performing any electrical work.

NOTE: Review this section in its entirety before performing the following steps.

#### 9.1. Solenoid Connector – Reconfigure & Wiring

To allow for proper fitment, the solenoid connector housing needs to be reconfigured 180°. It must be disassembled and reassembled at the proper orientation.



**Original Configuration** 

**Final Configuration** 

Figure 44- Solenoid Connector, Required Orientation

- 1) If not already detached, remove the electrical connector from the solenoid.
- 2) Remove the rubber boot to expose the separation slot.
- 3) Use a small pry tool to separate the connector from the housing.



Figure 45- Connector / Housing Separation

- 4) Flip the housing over 180°.
- 5) Hookup the Black & Violet wires to the highlighted terminals. Either wire can connect to either terminal.

Page | 35 Revision: C

## TRX21-734

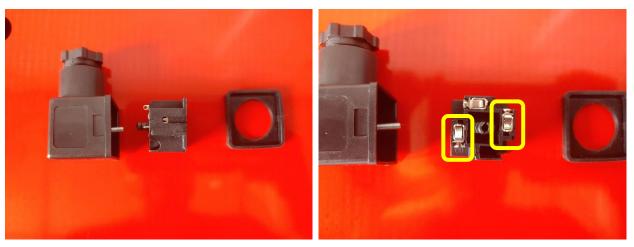


Figure 46- Connector Assembly & Wiring Hookups

- 6) Reassemble the connector.
- 7) Install the connector back onto the solenoid.

NOTE: It is recommended to use the included loom for all wiring applications.

8) Install the connector onto the solenoid as shown below.



Figure 47- Connector Installation

9) The medium length horn trumpet can now be installed onto the base.

Page | 36 Revision: C



TRX21-734

#### 9.2. Attach Relay & Fuse to Vehicle

Locate a suitable location under the hood and install the fuse housing & relay.

- For the Fuse: Select an area close to the POS (+) battery terminal
- The fuse housing can be attached to the vehicle body panel using the supplied screws
- The relay can be attached to the vehicle body using the supplied self-tapping screws

#### 9.3. Install Horn Button

Locate a desirable & accessible location to install the horn button. There should be a minimum of 1" clearance behind pushbutton to allow for the switch to be mounted and wired easily.

Factory upfitter switches may be used at the installers/customers discretion. Consult the owners manual or OEM documentation if using this option.

#### 9.4. Route Wiring & Make Connections

Route wiring as desired and make the appropriate connections per the below figure. Use the included wiring loom and crimp connectors as desired.

Page | 37 Revision: C



TRX21-734

### 10. Testing the Air System

It is recommended to check your wiring for shorts & continuity & double checking your connections prior to reconnecting the battery.

It is recommended to check the drain valve on the tank and ensure it is fully closed.

#### 10.1. Air Compressor Test

1. Start the vehicle & allow the air compressor to run and fill up the tank.

NOTE: The compressor should turn off after tank reaches  $\approx$  150 PSI. This should take between 2-5 minutes. If the compressor runs excessively, a leak may be present in the system.

- 2. Allow the tank to drain via, the horns (if installed), the Inflator kit, or the tanks drain valve.
- 3. Wait for the compressor to start up again to replenish the air supply.
- 4. Wait for the compressor to turn off when tank is fully pressurized.

#### 10.2. Air Horn Test

Ensure all persons nearby have adequate hearing protection & provide courtesy warning to neighbors before testing the horn system.

!!WARNING!! NEVER operate the air horns with ears in close proximity to the trumpets or in an enclosed space without SUBSTANTIAL HEARING PROTECTION for all persons closer than 50 feet from the vehicle.!!

1. Activate the air horns by pressing the horn button briefly. Horns should sound as expected and be loud.

The horn sound & loudness will diminish as the air tank loses pressure. Repeat, if desired, until the compressor turns on and begins refilling the air tank.

#### 10.3. Quick Connect Coupler Test

The quick connect coupler can be used to run the included INF-1 tire inflator kit or certain air tools.

- 1. If needed, allow the air compressor to refill the air tank.
- 2. Attach the INF-1 inflator kit and inflate tires
- 3. Optionally, an air blow gun/nozzle or an air nailer can be used to test the quick connect coupling.

Page | 38 Revision: C



TRX21-734

#### 11. Maintenance

!!WARNING!! Operating the air compressor above it maximum pressure rating may damage the internal components and/or cause unsafe system conditions. It is recommended not to exceed 150 PSI pressure in the system.!!

This air compressor is equipped with automatic thermal overload protection. If thermal overload is triggered, the safety circuit will reset after 30 minutes.

This air compressor is oil-less, Never lubricate or add liquids to this compressor.

#### Monthly or every 10 Hours of Compressor Use:

Drain the moisture from the air tank via the tanks drain valve.

#### Yearly or 12,000 Miles

- Replace the compressors air filter element. Replacement frequency depends on operating & environmental conditions.
- Remove road grime or mud from components & brackets.
- Inspect all mounting fasteners to ensure they remain secure. Tighten as needed.
- Inspect electrical connections & loom for damage. Repair/Replace as needed.

Page | 39 Revision: C



TRX21-734

### 12. Warranty Information

Thank you for purchasing this Air System. If you experience any unexpected problems during installation, or part failure at any time, please contact KLEINN Support.

#### KLEINN MANUFACTURER LIMITED DEFECT WARRANTY:

Kleinn Automotive Accessories warrants this product to the end-user, when properly installed and under normal conditions of use, to be free from defects in workmanship and materials for a period of one year from the provided date of purchase to the original purchaser of the product. This warranty does not cover abuse, operation in a manner inconsistent with the product's design, or damage resulting from exposure to the elements. If the defect is considered "under warranty", Kleinn will, at its option, repair or replace the product free of charge to the original purchaser. Kleinn is not liable for any installation charges, loss or damage of any kind incurred in the replacement or repair of any warranted product.

© Kleinn Automotive Accessories, All rights reserved.

Phone: <u>(520) 579-1531</u> Web: <u>www.Kleinn.com</u>

Page | 40 Revision: C



## TRX21-734

## **Record of Revisions**

Revision	Description	Date	Approval
Beta	Beta Launch Development	01/22/2024	AG
Α	Initial Revision	5/22/2024	AG
В	Updated Section 1.2	9/18/2024	AG
С	Updated Qty: to 4 on F2, Section 5.2 Updated Section 7.4 (added 7.4.1 & 7.4.2) Updated Figure Numbers Added emphasized section on 7.4 #3 for trumpet separation	4/10/2025	AG

Page | 41 Revision: C